




User manual of JPC-A18 4G/WIFI camera



1. Get the app, "CamHi"

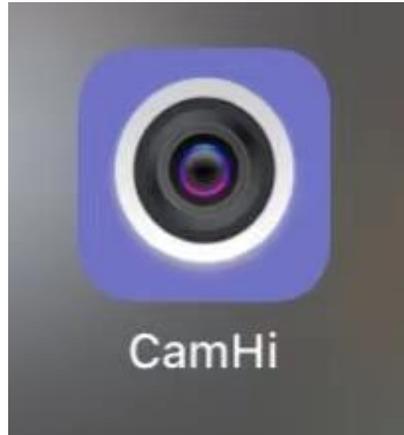

2. Open app-CamHi ,and add camera, QR code is at the bottom of camera

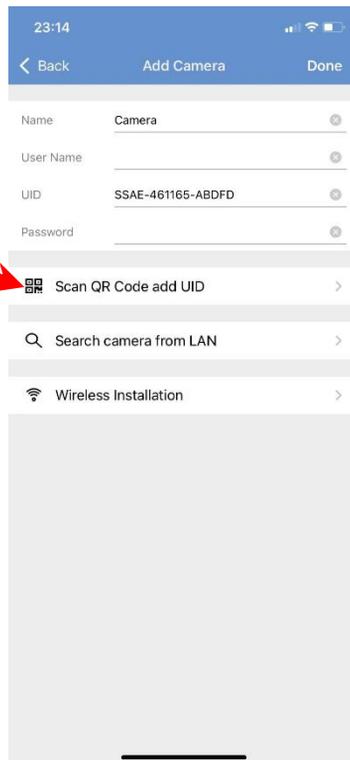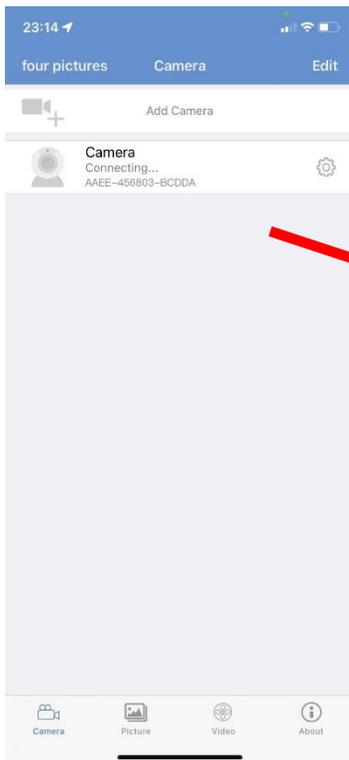

3. Insert TF card and sim card, then power on the camera(12V), connect the Wi-Fi of camera, if 4G camera ,Wi-Fi named-MIFI_**** if Wi-Fi camera, Wi-Fi name-IPCAM ****



4G camera




WIFI camera




4. Then will connect the camera(if have 4G and Wi-Fi install on one truck, need connect 4G camera first)







5. Change the past word of camera(will need this camera when load on PC platform)

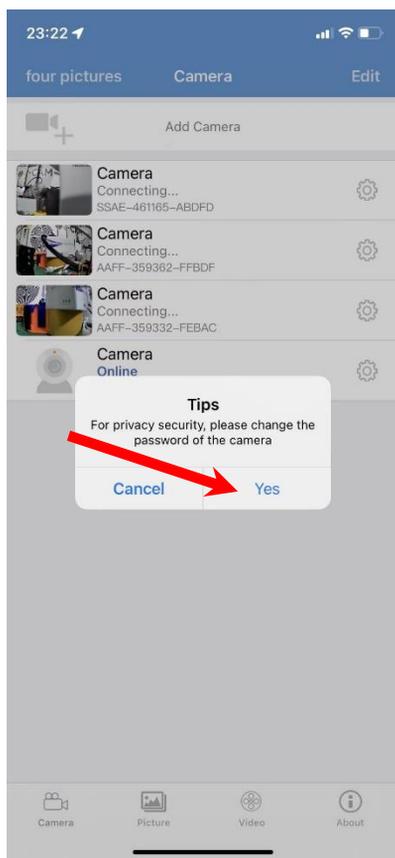


5. Set Wi-Fi camera Wi-Fi information (this is key step if 4G and Wi-Fi camera install on same truck, as Wi-Fi camera connect 4G camera, you can check on app and PC remotely)


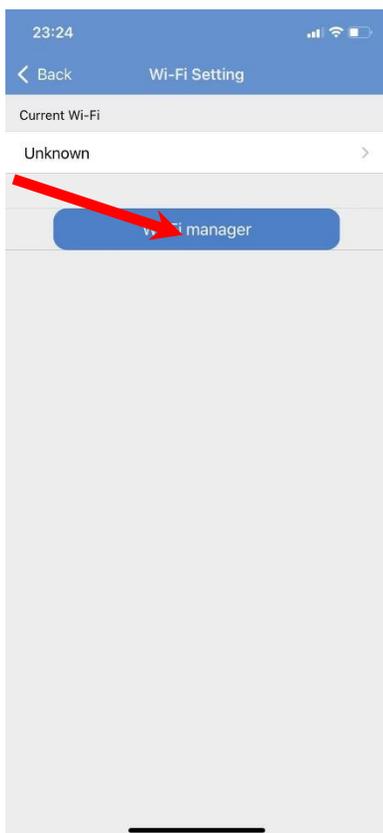
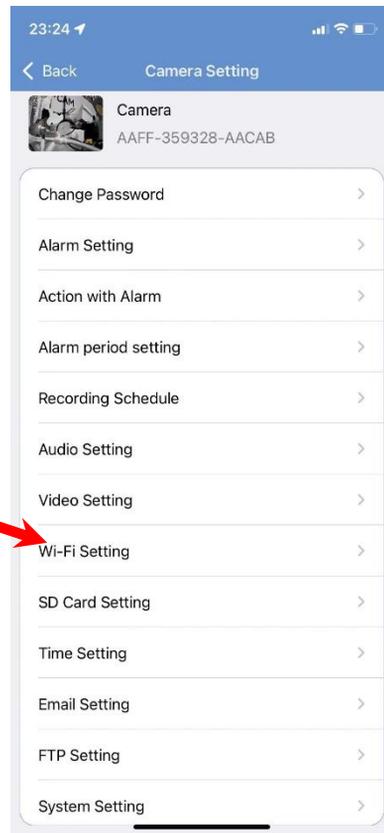
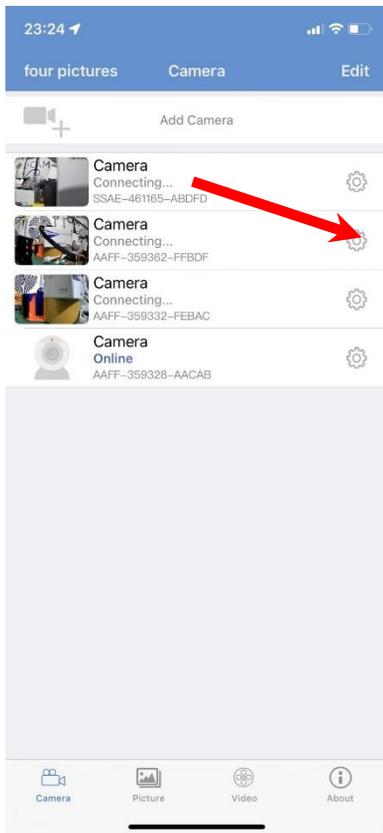






6. About camera setting

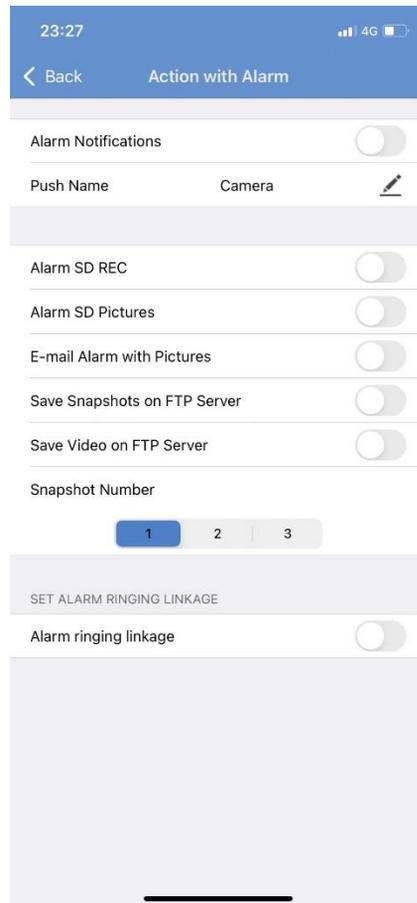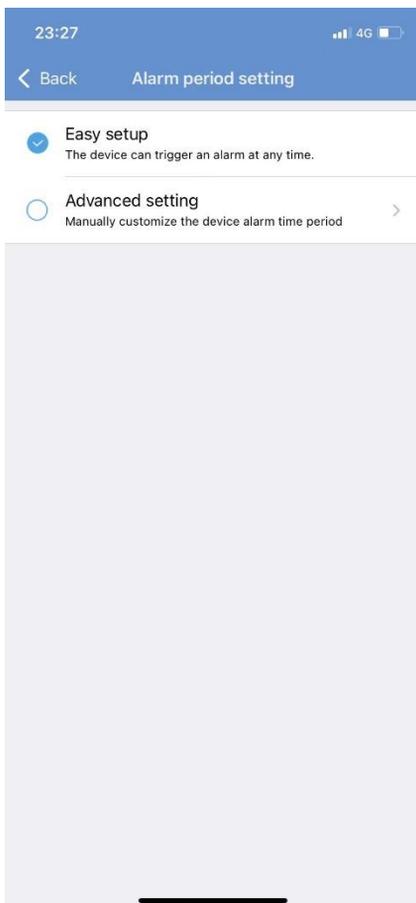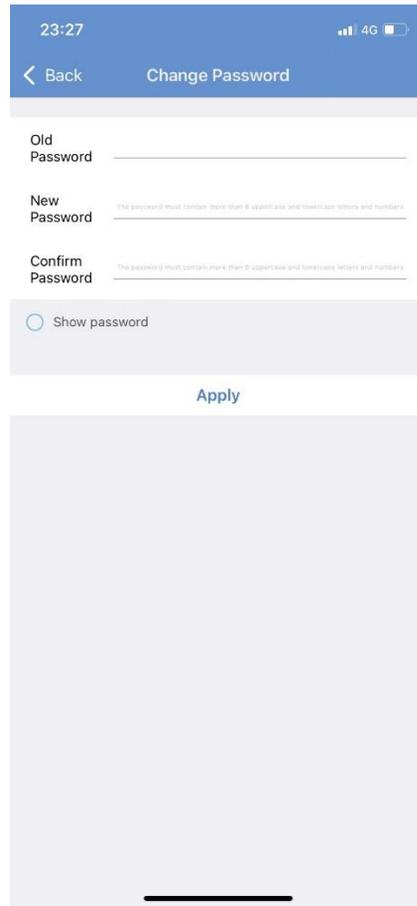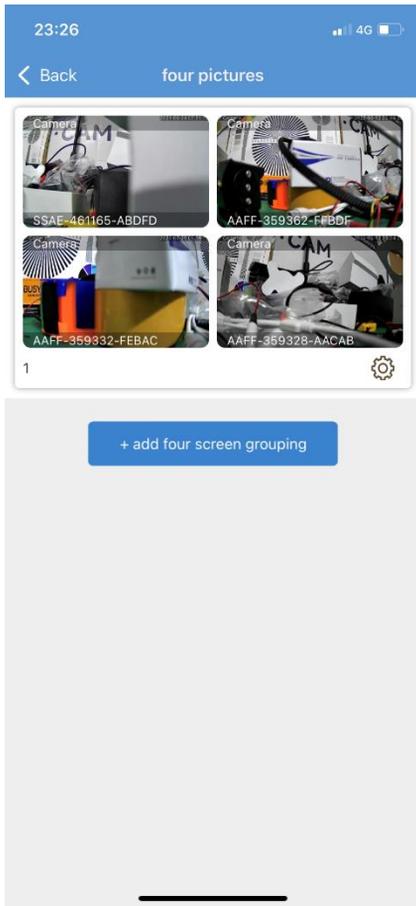

6.1 when insert TF card ,you can get video record document every 10mins,you can check online file(if you click record button on app,you shall get record document on local)

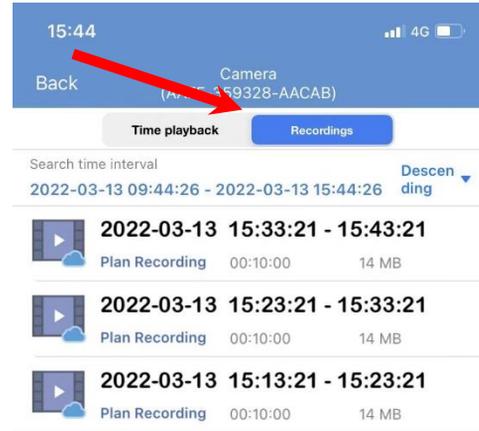

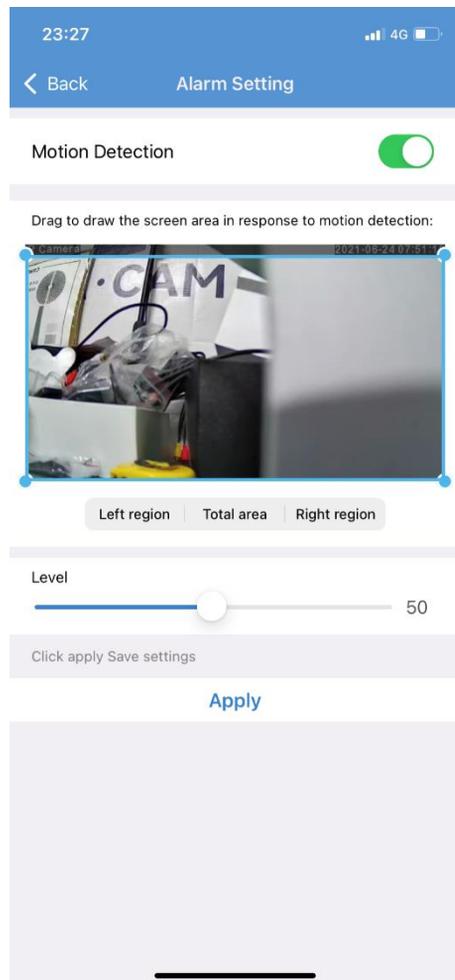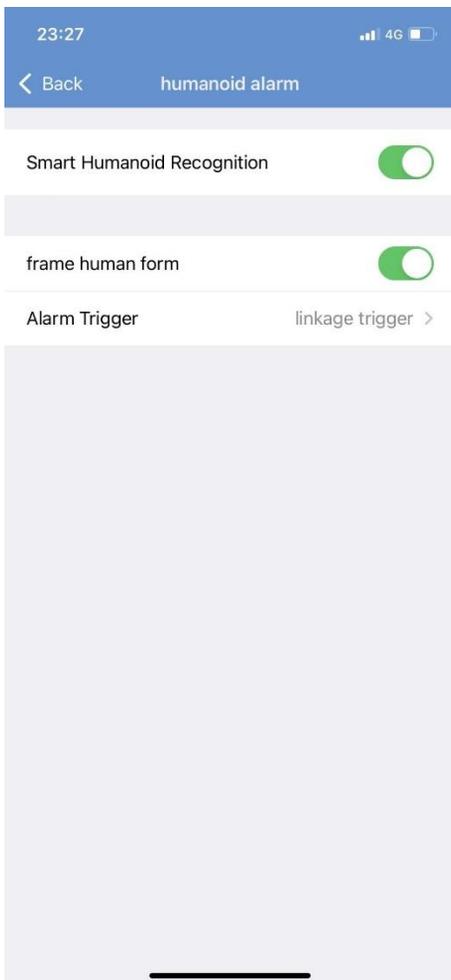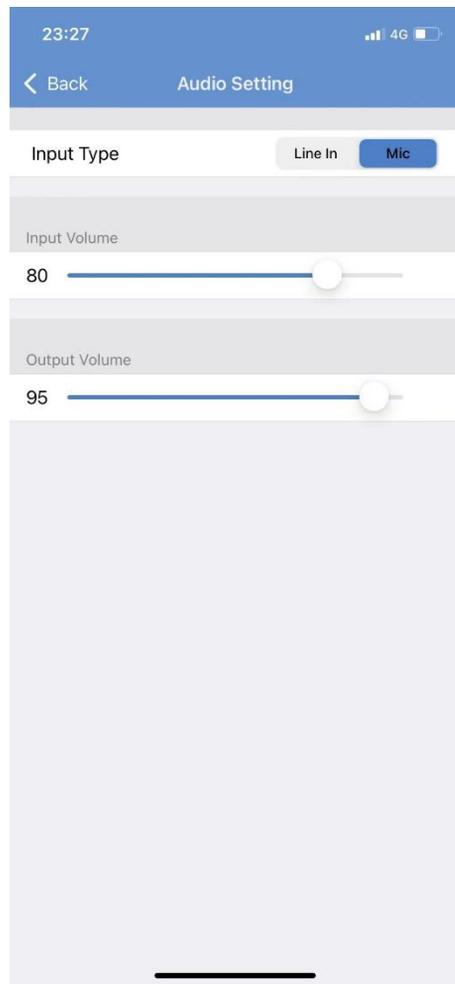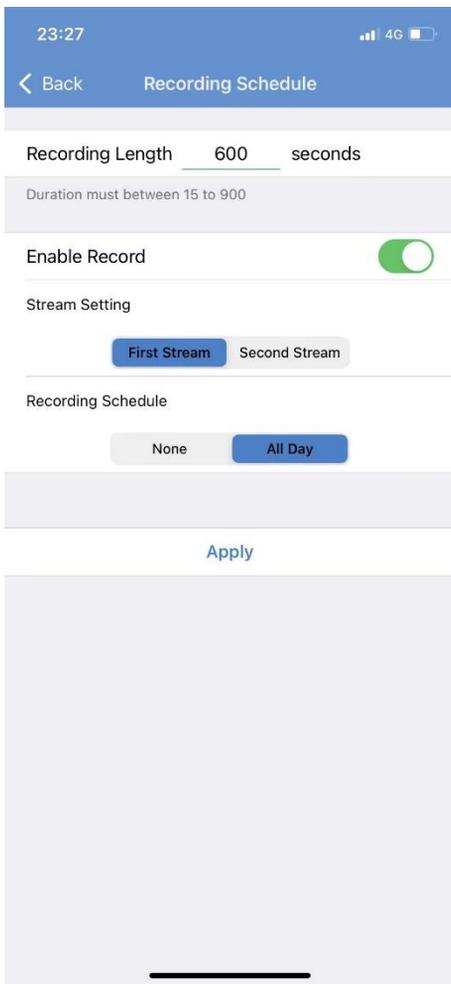


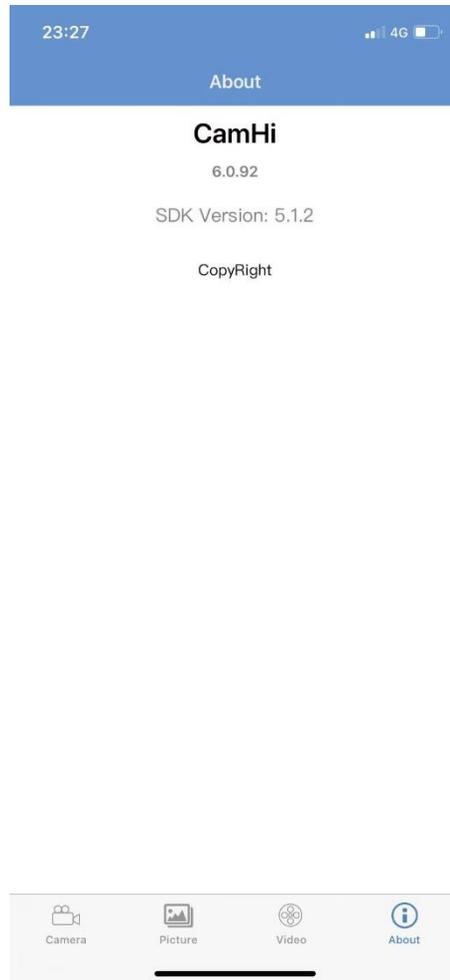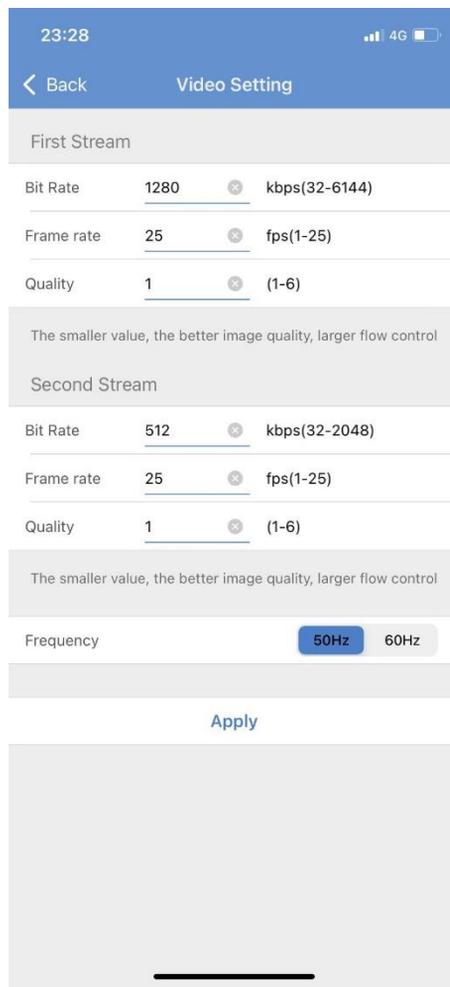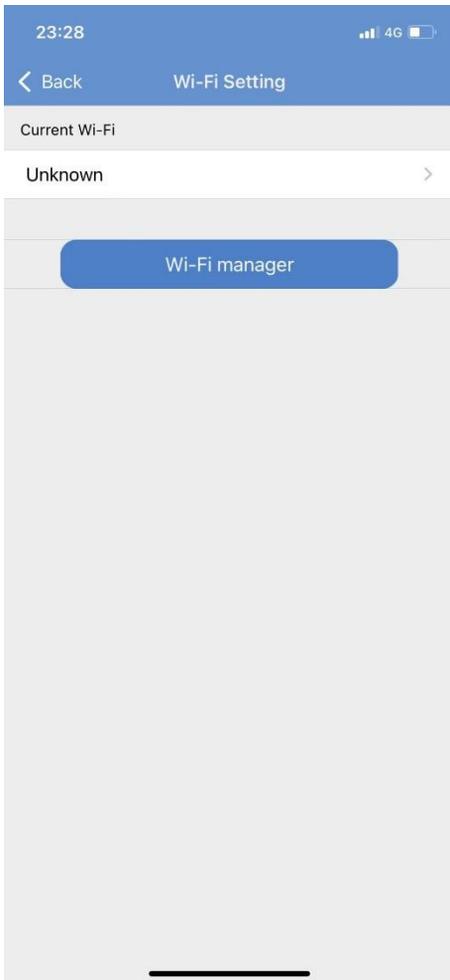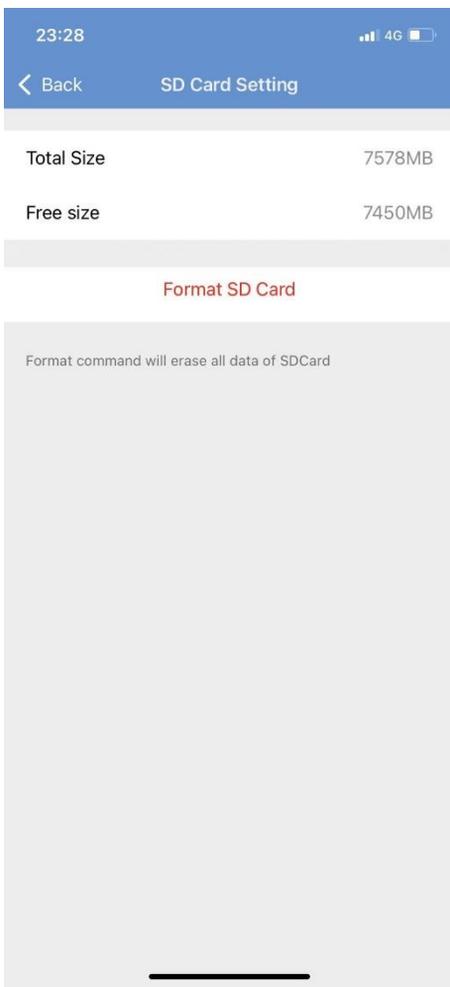


7. Connect PC platform-HiP2P Client(we shall send install package)




7.1 choose install as English version(1.Russian 2. France 3.Japanese 4.Italian 5.English 6. Chinese)

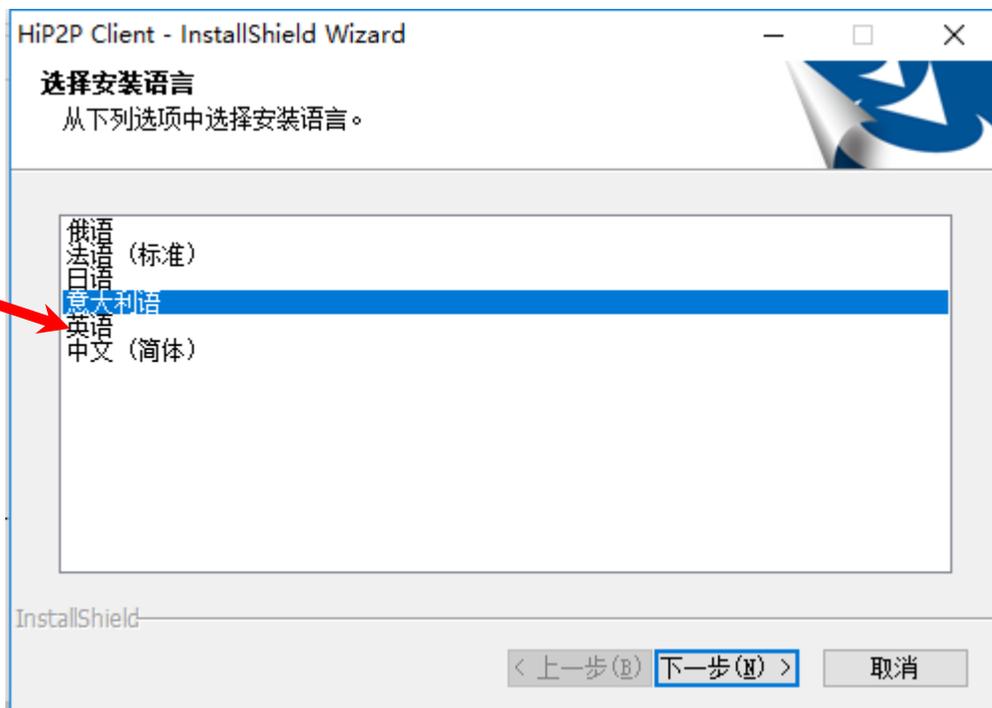



7.2 No password for user config, click ok

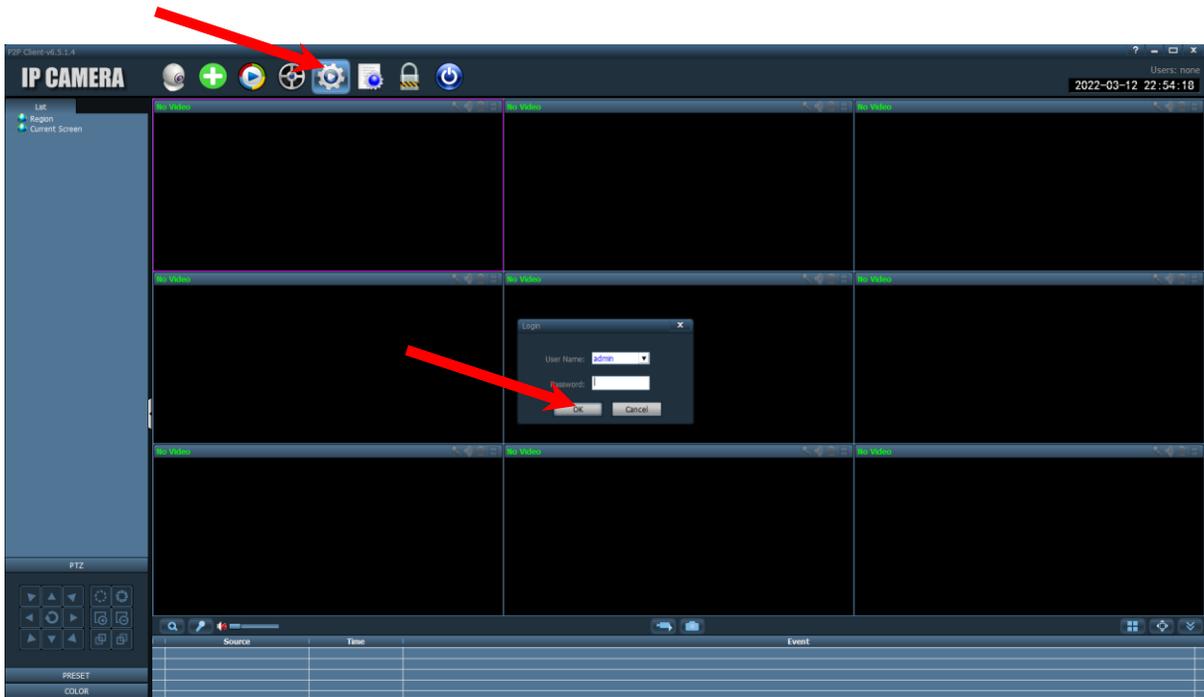


7.3 hand input UID(at bottom of camera, password of camera is the one you set on your phone APP)

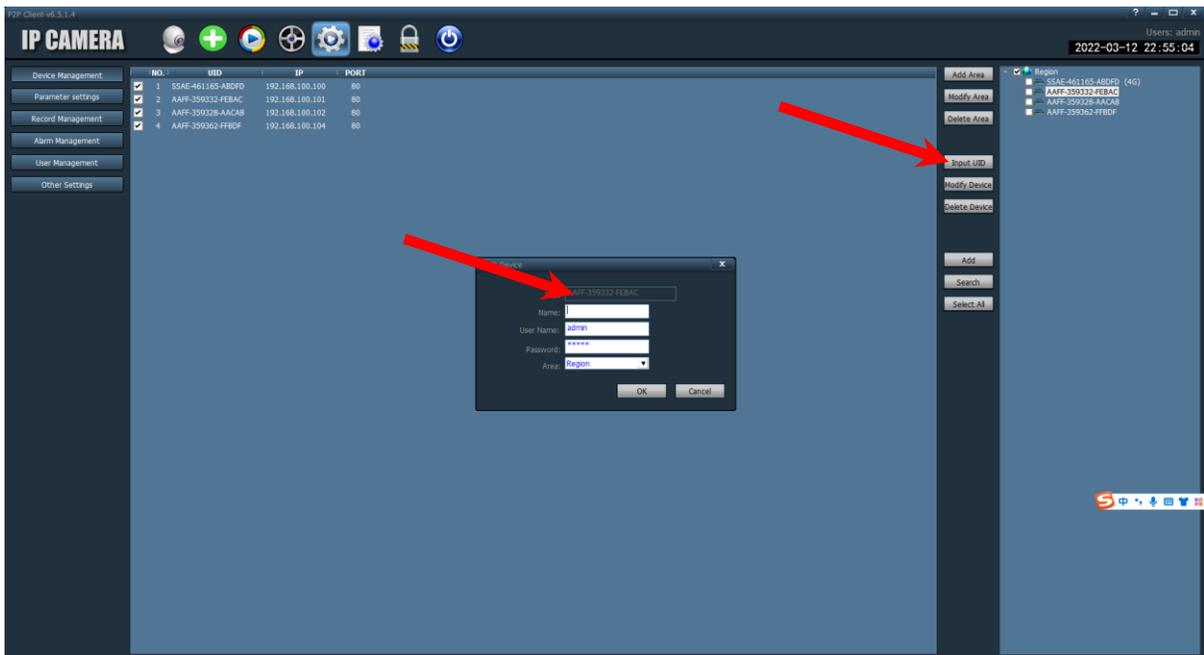

7.4 click the camera and choose “connected Device”

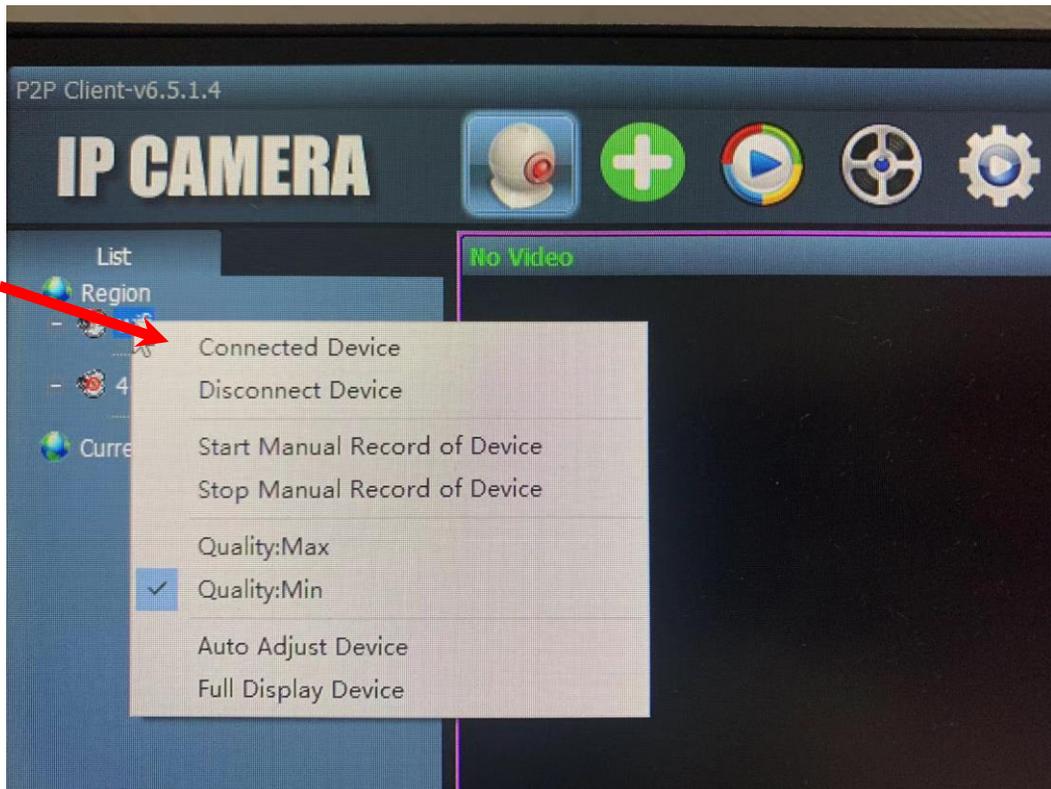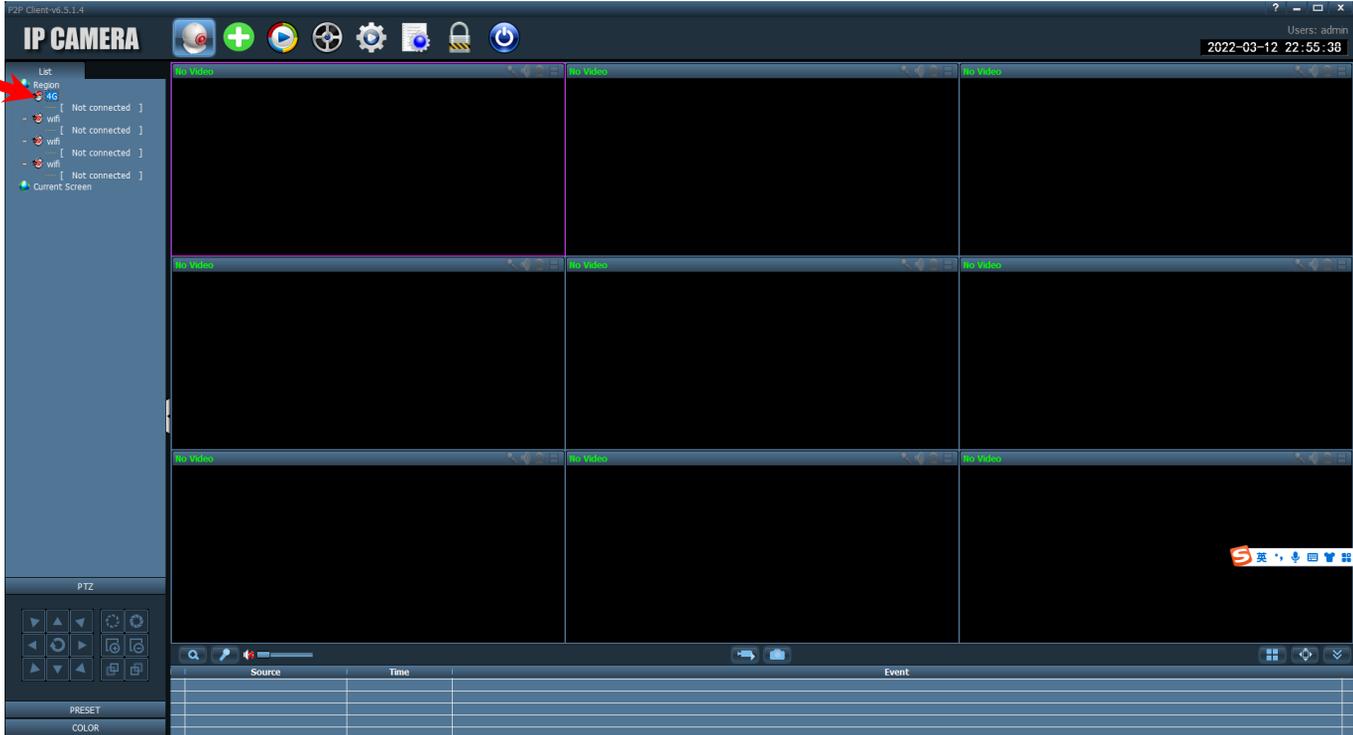

7.5 when you camera is online, you can see this

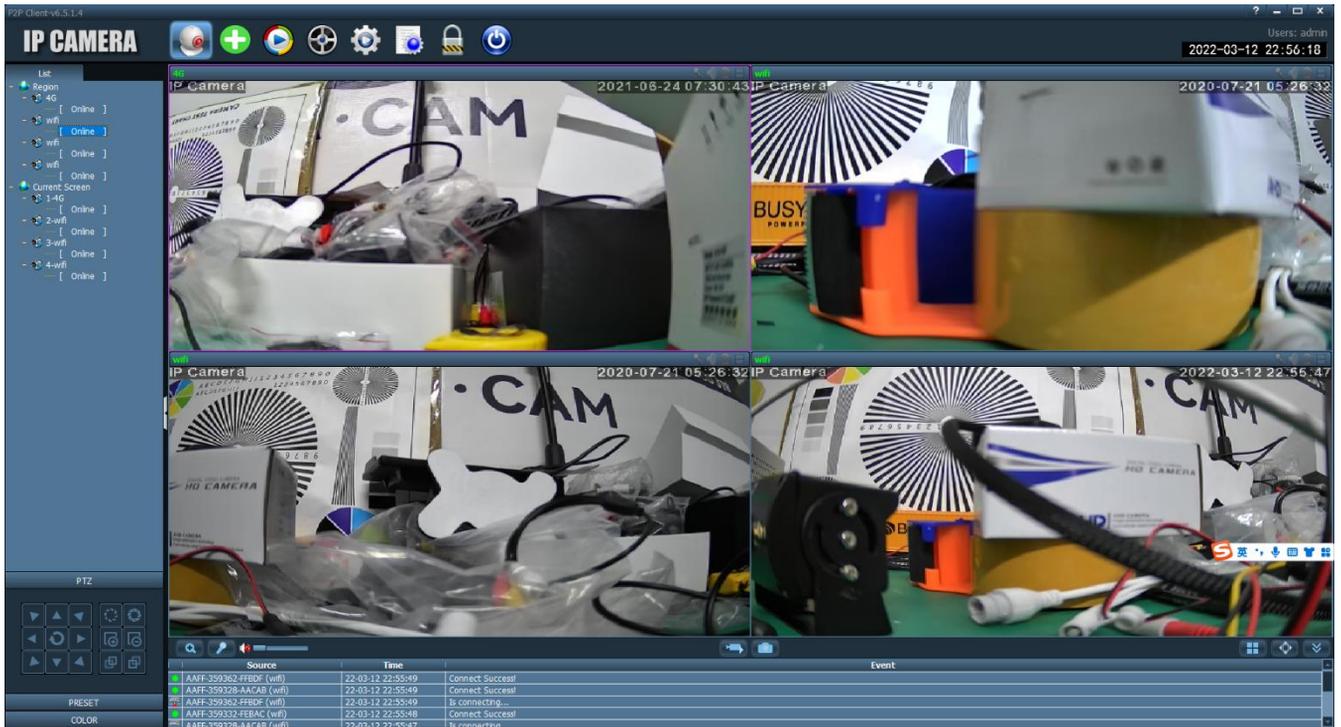

7.6 other set of platform

